 


mistral[®]

CREATING BREEZE SINCE 1968

24V Rechargeable Drum Fan

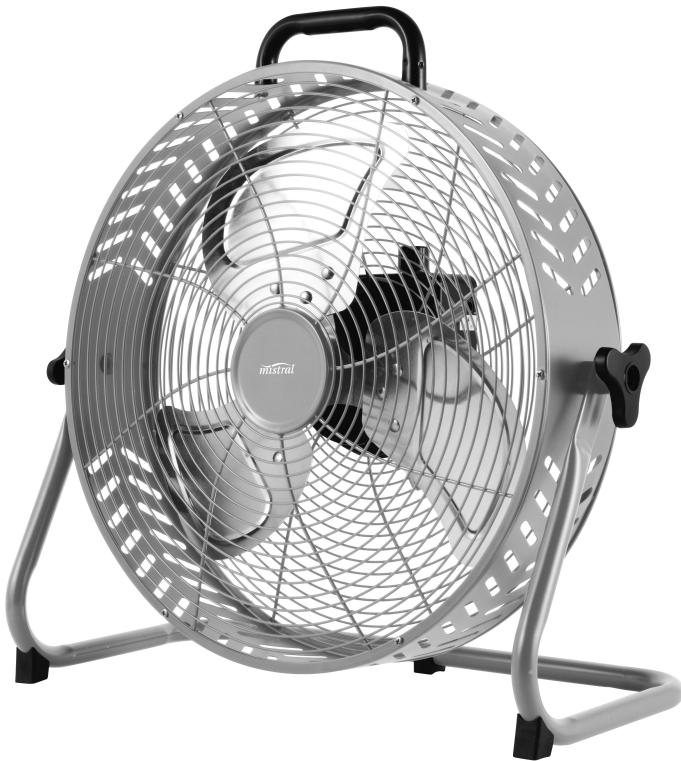

Instruction Manual

Model: MCHARGE14

2
YEAR

Warranty

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Take care when any appliance is used near pets.
- Turn off appliance, Switch off the power outlet and remove the plug when the appliance is not in use.
- Do not operate any appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not use outdoors, this fan indoor use only.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- This appliance adapter is intended to be plugged in a 220-240V outlet.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Arrange the power cord away from traffic areas where it will not be tripped over.

- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or user.
- Ensure that the fan is turn off and unplugged before removing the guard.
- To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- Do not use fan near curtains, plants, window treatment, or where other objects can become caught in the blades.
- Do not operate with wet hands.
- Do not let the cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not operate fan in the presence of explosive and/or flammable fumes. Do not place the fan near an open flame, cooking or other heating appliance.
- Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
- Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision.
- Always unplug and turn off the fan when moving from one location to another, when removing grilles or for cleaning.
- Do not use the fan without fully assembled. The fan must operate standing upright.
- To protect against fire, electrical shock and injury to persons, do not immerse unit, plug or cord in water or spray with liquids.
- Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
- Do not immerse cables, plugs or any part of the appliance in water or any other liquid.
- Place the fan on a stable level, even surface when operating to avoid overturning.
- Switch off the appliance and unplug the USB before cleaning or inspecting any part of the appliance.

- Do not operate with a damaged charger or after the fan malfunctions, has been dropped or damaged in any manner. DO NOT operate the fan with a broken blade, safety cage or any visual imperfections.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the manufacturer.
- Do not put heavy objects on the appliance.
- Do not tip the unit on its side.
- Never insert any other object into the unit body to avoid any hazard or unit failure.
- Keep fingers, hair and clothing away from this appliance.
- Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
- If the charger become damaged contact the manufacturer or its service agent for an original replacement part.
- The appliance must be positioned so that the plug is accessible during charging.
- For optimal airflow circulation, leave a distance of at least 1 metre around the appliance on every side.
- Always direct the airflow in order to optimize cooling. Avoid corners, small objects and other surfaces or objects which may impede the airflow.
- Use the Carry Handle when moving the fan. Do not carry until the fan has stopped.

WARNING: Do not operate without the fan grilles properly in place. Do not use if grille becomes deformed, damaged or loosen to avoid injury to persons.

WARNING: Do not place the unit on or near a hot gas electric burner.

WARNING: When using rechargeable lithium powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

Use your charger only to charge the battery in the appliance with which it was supplied. Other batteries could burst, causing personal injury and damage.

Never attempt to charge non-chargeable batteries.

If the charger or supply cord becomes damaged, it must be replaced by the manufacturer or an authorised Service Centre in order to avoid a hazard.

Do not expose the charger to water.

Do not open the charger.

Do not probe the charger.

The appliance/battery must be placed in a well ventilated area when charging.

Warning

If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Electrical Safety Symbols on the charger



Read all of this manual carefully before using the appliance.

 


This appliance is double insulated; therefore no earth wire is required. Always check that the power supply corresponds to the voltage on the rating plate.



The power supply is intended for indoor use only.

Features of Your Rechargeable DC Floor Fan

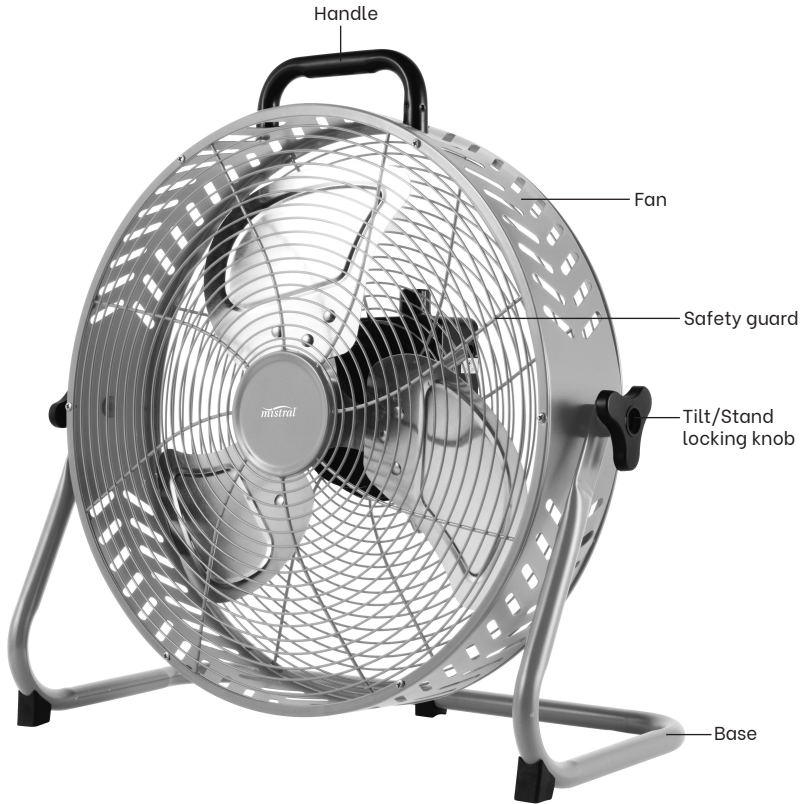

Getting to Know Your Rechargeable DC Floor Fan

Congratulations on the purchase of your new Rechargeable DC Floor Fan.

Most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Your Rechargeable DC Floor Fan is safe and easy to use. It has been designed to function quietly and safely under normal circumstances.

Operation of Your Rechargeable DC Floor Fan

Take the fan from the package, remove the packaging materials and unravel the cordset before operation.

Set the fan base of the fan on a dry, firm and level surface.

 
Charging the Battery

Plug the adapter into the Input Socket at the rear of the unit and then plug into the wall socket. When charging, the battery indicator lights will illuminate in turn to indicate the charging progression. All 4 lights will be illuminated when the unit is fully charged.

The indicator light shows the battery capacity at four levels; 10%, 30%, 50% and 100%.

Each light will go out as the battery is used. The 10% light will flash when it is almost out of power.

Although the fan can be independently operated by just the battery and be positioned wherever you want, if connected to AC/DC power adapter when in charging mode, the fan can continue to be operated without draining the battery, although portability is limited to the nearest available power outlet.

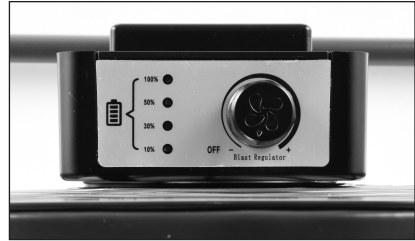

Turning the Unit On or Off.

Turn the Speed-On/Off Control Dial clockwise (“+”) to turn the fan on and increase the speed progressively.

Turn the Speed-On/Off Control Dial anti-clockwise (“-”) to decrease the speed and turn fan Off.

There will be an audible click as the dial is turned between On and Off.

Fan Speed Selection

 
Once the fan is turned on, adjust the fan speed setting as required by turning the Speed-On/Off Control Dial clockwise to increase the fan speed and anti-clockwise to decrease the fan speed.

This fan construction incorporates variable speed-On/Off control between minimum (“-”) and maximum (“+”) speed by turning speed-On/Off control dial anti clockwise or clockwise.

Adjusting the Air Flow direction

The construction of this fan allows you to manually adjust the airflow direction by adjusting and repositioning the fan head angle.

Unlock the two tilt locking knobs on each side of the fan head mount to the stand, tilt the fan head to the desired angle and tighten the tilt locking knobs to secure the position.

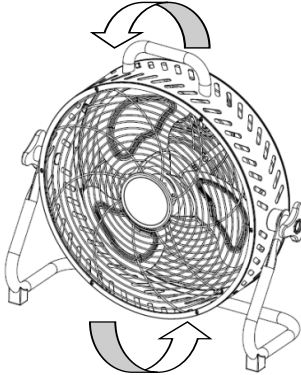

Note: Do not force lift or push the fan head direction position with the tilt lock knobs fully locked. The fan head does not rotate a full 360 Degree, the most effective airflow direction is by having the top of the fan head positioned between 10 and 2 O'clock.

Charging Other Appliances

The fan construction facilitates for the built-in battery to function as a Power bank to charge smaller electronic devices.

Insert a USB charging cable into the USB Output interface at the back of the unit. It is able to charge mobile phones or similar 5V DC rechargeable devices.

Safety Protection Device

The fan and batteries has a built-in battery charge safety protection device to protect against battery overcharging and low voltage discharging.

With the battery fully charged, the protection device will auto shut-off charging power to the battery, equally it will auto shut-off when the battery voltage is lower than the default setting of the fan.

When this occurs simply wait for a few minutes and after auto reset can turn fan back on.

Auto Stop

Incorporated in the design of the fan, it has an Auto-Stop feature, where accidental obstruction of a moving fan blade will stop the fan motor from running and restore fan movement when obstructing object is removed.

Should obstruction happen 4 consecutive times, the fan will stop completely.

In that instance turn speed-On/Off control dial to the OFF position and turn back On again to restore fan blade movement.

Warning: Do not insert fingers or objects intentionally to obstruct fan blade movement as this may cause injury.

Technical Specifications

Model: MCHARGE 14

Adaptor Input voltage: 220-240V~

Frequency: 50 Hz

Input of fan: 24VDC 25W

Weight: 3.1kg

Battery type/capacity: Type 18650, 2550mAh x 6

Full Charge Time: 3-4 Hours

Run Time: 3-25 Hours

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Care and Cleaning

WARNING: Before cleaning and maintenance, switch the appliance off and remove the plug from the socket, to prevent electric shock. Your appliance requires no additional lubrication or maintenance.

There are no user serviceable parts in your appliance.

Do not immerse any part of the appliance, power cord or plug in liquids.

Use a soft dry cloth to wipe the surface. A damp cloth with a small amount of mild detergent can be used if needed. Avoid using detergent, spray, solvents or chemicals as these may cause damage to the appliance.

WARNING: DO NOT allow water or steam to enter any part of the appliance, as this could cause it to malfunction.

Keep the motor ventilation slots clean. Periodically clean the grills, control panel with a clean, dry cloth to prevent dust build up. Never spray with liquids or submerge the fan in water or any other liquid. Ensure that the fan is completely dry before reusing.

Store the rechargeable DC floor fan in a cool, dry place, ideally in its original packaging.

Protecting the environment

This rechargeable DC floor fan including a Li-ion batteries.

The Products and batteries must not be disposed of with normal household waste.

Please recycle electrical products and batteries according to local provisions and law.

Do not put the batteries in fire, do not drill or compact the batteries.

Warranty

This product is guaranteed to be free from defects in workmanship and materials, including parts for a period of 24 month from the date of purchase. Defects that occur within the warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to are replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Extent of Warranty

This warranty is limited to defects in workmanship and materials, including parts. All defective products or parts will be repaired, replaced or refunded. This warranty does not cover batteries or any other consumable items.

Normal wear and tear

This warranty does not cover normal wear to the products or parts.

Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

To make a claim

This warranty against defects is given by : GSM Electrical(Australia) Pty Ltd

Address: Level 2, 142-144 Fullarton Road, Rose Park, South Australia 5067

Email: service@gsm.com.au

Telephone: 1300 301 838

If a defect in the product appears within the nominated warranty period (The identified period on the packaging/Instructions), cease using the product, and return the product to the place of purchase. If we agree that a defect covered by this warranty has occurred, you are entitled for replacement or refund of the product.

When making a return, please ensure the product is properly packaged to ensure that no damage occurs to the product during transit. Where a claim for warranty extends beyond place of purchase replacement /refund (Installed products requiring service repair) please contact:

Telephone: 1300 941 901 (For warranty repairs and technical support)

Supplier Name: GSM Retail Australia Pty Ltd

Supplier Address: 142-144 Fullarton Road, Rose Park, SA 5067

Email: admin@gsmretailgroup.com

G | S | M

Gerard Sourcing & Manufacturing

GSM Retail Group

Consumer Service Centre : 1300 941 901

GSM Retail Group has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Group
Mistral is a registered trademark of GSM Retail Group



Cat. No. MCHARGE14
July 2021