

mistral[®]

OPERATION INSTRUCTIONS

A5尺寸
70克双胶纸
黑白印刷
此红色文字不印刷



7kg Tumble Dryer Model No. MBDY349W-F MBDY349W

Thank you

This Mistral Dryer carries a 2 year warranty, be sure to retain your installation and user manual and receipt.

For Technical queries please contact
Aust: **1300 373 199**
NZ: **0800 764 912**

Contents

Safety Notices	1
Parts and features	3
Installation	3
The Functions of the control panel	4
How to use Dryer	6
Care and Cleaning	7
Trouble shooting	8
Electric Diagram	13

PREFACE

This dryer conforms to current safety requirements. Inappropriate use can however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the dryer, please read this manual carefully before using it for the first time. They contain important information on its installation, safety, use and maintenance.

Keep this manual in a safe place for future reference.

WARNING



Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Possible electric shocks

- Disassembly, reparation or modification cannot be carried out by people other than professional maintenance staffs.
- The household electrical supply system(the current, the voltage, the cable) such as a fuse with suitable specifications should be provided. The should meet requirements of the dryer under normal load, and safety devices.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't disconnect the power plug by pulling the supply cord. Hold the power plug with your hand.
- Don't use the supply cord when connection of the power plug and the supply cord is loose.
- Don't touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Don't over-bend the supply cord or put it under heavy weight.
- Don't use the supply cord/ socket/power plug if it is damaged or broken.

Possible Explosions

- Don't put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Don't connect/ disconnect the power plug when leakage of gas or other combustible gas occurs.

Fire accidents / short circuit or electric leakage may occur

- Don't install the appliance close to fire sources or heat sources.
- Don't rest any burning candles or cigarettes on the appliance.
- Don't install the appliance in places with dampness or suffer from rainfalls, lest igniting damages or other accidents occur easily due to gathered water drops on electrical components.
- Don't install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Don't use water shooting at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- When using stain remover on your laundry, ensure you run an extra rinse cycle prior to loading the tumble dryer.
- Ensure all pockets are empty prior to loading laundry into the tumble dryer.

- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Ensure the openings in the base are not obstructed by carpets.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.



Warning | Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.


Personal injury may occur

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To avoid danger to children, ensure all packaging is disposed of safely.
- Ensure children under 3 years of age are supervised.
- Wait until the drum has stopped completely prior to removing laundry from the dryer.
- Children and pets should be kept away when the dryer is working to ensure they do not become trapped. Always check the drum carefully before closing the door.


Other instructions

- This appliance is designed for domestic use .It must not be used for purposes other than those for which it was designed .
- Only wash fabrics which are designed to be machine dried . Follow the instruction on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor ,please adjust the feet in order to allow air to circulate freely under the appliance.
- Don't climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins ,safety pins ,nails ,screws ,stones or any other hard ,sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance ,check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps ,waterproof textiles ,rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use ,clean and maintenance.
- Don't overload the appliance .See the relevant section in the user manual.
- Clothes which are dripping wet should not be places in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used ,care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable ,the control panel ,the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Don't dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final pat of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door ,a sliding door or a door with a hinge on the opposite side to hat of the tumble dryer ,in such a way that a full opening of the tumble dryer door is restricted.
- That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.


Product description

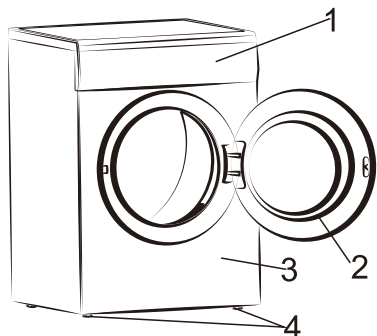

1. Control Panel
2. Door AS
3. Cabinet
4. Adjustable Feet
5. Thermostat reset button
6. Side Vent outlet
7. Vent Pipe Cover
8. Rear Vent outlet

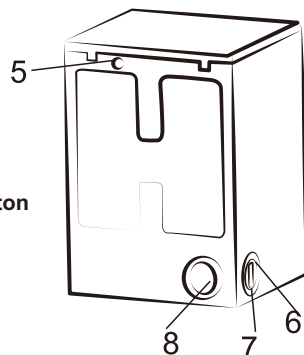

Control panel

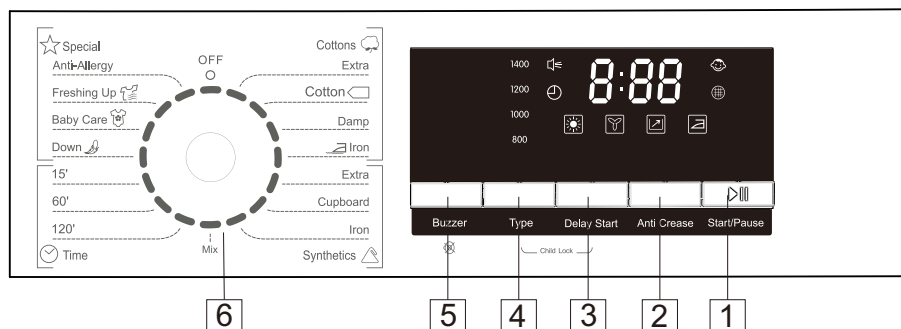

1. Start/Pause
2. Anti Crease
3. Delay Start
4. Type
5. Buzzer
6. Programme Selector Dial


First Use

- Ensure that electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Daily Use


Connect the appliance

- Open the door (see picture).
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter.

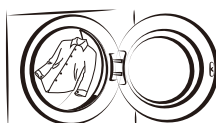

Select the required programme

- Turn the programme selector dial to the required programme. The corresponding light starts to flash. The programme will be switched off if you have not pressed any button for 10 minutes.

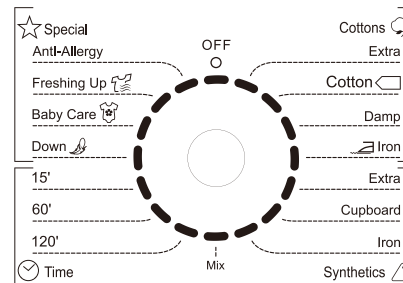

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time
- Special

Note:

“Cotton ” is for the “standard cotton programme”. The programme is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

Automatic controlled drying

The appliance detects the moisture in the load and automatically adjust the drying time for optimal drying. Just select the programme according to fabrics. This drying system holds good for cottons, synthetics sections and Anti-Bacterial, Silk programme.

Time controlled drying

Can be used to finish off drying if necessary. Select the 90 or 60 minute programme for cottons or the 30 programme for synthetics. To cancel a programme which is running, turn the programme selector dial to “off”. At the end of drying, turn the selector dial to “off” to switch the machine off before removing the laundry.

Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the “Start/Pause” button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

Select the Start/Pause

The dryer will pause after pressing the button again or opening the door while the programme is running. Programme cannot be selected while the dryer is paused. Buzzer and anti-crease. excepted. To re-start the programme, press the Start/Pause button once again.

Select the Anti-crease

Anti-crease is optional for all programs. In standby or paused state, Anti-crease function can be selected.

Select Delay start

This button allows you to delay the start of the programme by up to 24 hours (each time the button is pressed the time is increased by 1 hour). This option must be selected after setting the required programme and before pressing “Start/Pause” to commence drying. When “Start /Pause” is pressed, the corresponding pilot lights start to flash and countdown begins.



The countdown begins after you have pressed the “Start/Pause” button. The corresponding light illuminates when you have pressed this button. All pilot lights go out except Delay Start pilot light.

Select Drying Type

This button allows you to select the drying programme depending on the rotating speed of washer.

Select Buzzer button

The buzzer can be selected during normal use. Press the "Buzzer" button to turn off the buzzer and corresponding light. Press once again to activate the buzzer and corresponding light. A sound will be emitted.

Display

The display shows the following information:

After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the programme starts, the remaining time is displayed.

Delay start

If you have selected a delay time, the remaining time is displayed. Once you press the "Start/Pause" button, the appliance will start the delayed process. If you want to check the programme selected, please press the "Delay Start" button once more. And the time of selected programme shows. Incorrect option selection, If you select an option that is incorrect or not compatible with the programme you have selected, the signal will sound as "Bi, Bi, Bi" to show error.


Indicator lights

These lights indicate the following functions:

- Drying light "☀️" This light indicates that the appliance is in the drying phase.
 - Cooling light "❄️" This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 5 or 10 minutes cooling phase to cool the laundry.
 - End of programme light "☑️" This light is on at the end of the cooling phase.
 - Anti-crease light "👔" This light is on when anti-crease programme is selected.
 - Filter light "🌀" It comes on every cycle to remind you that the filter must be cleaned and at the end of the programme.
 - Child lock light "👶" Press the two keys above the child lock icon at the same time for 5 seconds, the child lock icon "👶" light, this function is selected.
 - If you want to disable the child lock function, press the above two keys at the same time for 5 seconds.
 - Buzzer light "🔊" This light is on when buzzer programme is selected.
 - Delay Start light "⌚" This light is on when delay start programme is selected.
- Type light, This light is on when drying programme is selected depending on the rotating speed of washer.

Thermostat reset

If during operation, the heating element doesn't work, the manual thermostat may have activated. To reset, first turn the programme selector dial to the position "Synthetics" and press the start button, approximately 20 minutes later, press the thermostat reset button as shown.

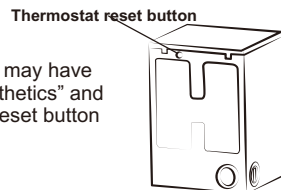

At the end of the programme

All drying programmes end with a 5 or 10 minute cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 10 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase. The display shows "End" and the buzzer sounds for 15 seconds if you have selected the buzzer. To finish, turn the programme selector dial to off.

Important:

If the door of the appliance is opened while the programme is running, the "Start" button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

After each use

Clean the filter.

Modifying the programme

To change a programme which is running, first cancel it by turning programme selector dial to "off".

Select the new programme and press the "Start" button.

Attention: According to "-" for the dormant state;

- standby mode, 10 minutes later, without any operation, enter a dormant state.

- controller shows "End", 5 minutes later, without any operation, enter a dormant state.



Drying Hints

Before loading the laundry

Never tumble dry the following: Particularly delicate items such as net curtains, woolen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



May be tumble dried



Delicate drying (low temperature)



Normal drying (high temperature)



Do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Don't over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, too, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.)

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. To avoid laundry becoming tangled:

Close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons). Turn items with double-layered fabrics inside out (e.g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better. Remove all objects from pockets such as lighters and matches.

Maximum loads

Recommended loads are indicated in the program charts :

General rules: **Cotton ,linen** : drum full but not too tightly packed ;

Synthetics : drum no more than half full ;

Delicate fabrics and woollens : drum no more than quarter full.


Try to load the maximum capacity of the machine as small loads are uneconomical.

Laundry weights

The following weights are indicative:

Bathrobe	1200g	night dress	200g
napkin	100g	ladies' briefs	100g
quilt cover	700g	men's work shirt	600g
sheet	500g	men's shirt	200g
pillow case	200g	men's pyjamas	500g
tablecloth	250g	blouse	100g
towelling towel	200g	men's underpants	100g
tea cloth	100g		

Drying programmes

Section	Course	Max load	Description of programme
Cottons	Extra	7.0kg	Drying bathrobe, toweling towel, Jeans, work clothes.
		7.0kg	Drying bathrobe, toweling towel, Jeans, work clothes.
	Damp	7.0kg	Drying shirt, T-shirt, cotton trousers.
	Iron	7.0kg	Drying knitted items, cotton shirt.
Synthetics	Extra	3.5kg	Drying sheet, bed linen,table linen, starched laundry
	Cupboard	3.5kg	For sheet, tablecloth, synthetics items.
	Iron	3.5kg	For synthetics items.
Mix	Mix	3.5kg	For knitted items, shirt.
Time	15,60,120	7.0kg	Drying thick or multi-layered textiles, e.g.terry towelling items.For drying individual items of laundry or for small volumes.
Special	Down	4.0kg	For down.
	Baby care	3.5kg	For baby clothes.
	Freshing up	1.5kg	For refreshing or gently cleaning textiles.
	Anti-Allergy	2.0kg	For men's underpants, shirt .

If the weight of the laundry is less than 1 kg, it is more efficient to dry to select "Time controlled Drying" programme.

Care and cleaning


You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning

Use only soap and water and then dry thoroughly. Important: do not use methylated spirit, diluents or similar products.

Cleaning the filter

The "End" light and "Filter" light are lighting for long time after the program is finished, the light are indicating end user to clear the filter.

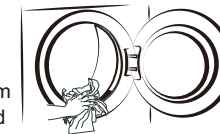


Cleaning the door

 Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.






The filter must be removed for cleaning. (See picture)



Something not working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Center, please carry out the checks listed below.
- During machine operation it is possible that the "Start/Pause" pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the "Start/Pause" button to restart the programme, If after all checks, the problem persists, contact your local Service Center.

Malfunction	Possible cause	Solution
Dryer does not work	<ul style="list-style-type: none"> • Mains plug is not plugged in. • Loading door is open. • Have you pressed the  Button? 	<ul style="list-style-type: none"> • Plug in at mains socket. • Close loading door. • Press the  button again.
Drying results unsatisfactory	<ul style="list-style-type: none"> • Wrong programme selected. • Filter clogged. • Incorrect volume of laundry. 	<ul style="list-style-type: none"> • Select a different programme the next time you dry(see "Drying programmes"section). • Clean lint filter. • Observe recommended loading volumes.
Drum light does not work	<ul style="list-style-type: none"> • Light bulb is defective. 	<ul style="list-style-type: none"> • Replace light bulb.
Drying cycle ends shortly after programme starts. "End" light illuminated.	<ul style="list-style-type: none"> • Not enough washing loaded or washing loaded is too dry for selected programme. 	<ul style="list-style-type: none"> • Select higher drying level (e.g.Extra instead of Damp.)
Drying cycle lasts an unusually long time.	<ul style="list-style-type: none"> • Load volume is too big. 	<ul style="list-style-type: none"> • Reduce load volume.

 If you are unable to identify or solve the problem, contact our service center. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Center will require this information.

Important: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.



Technical data

Dryer Model	MBDY349W-F / MBDY349W
Dry Capacity (kg)	7.0
Depth with loading door open(mm)	1030
Energy efficient gear	Cotton
Dimensions(W*D*H) (mm)	595*555*850

- ⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.
- ⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- ⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ IMPORTANT: The appliance must not built-in.

- **Unpacking:**
All packing must be removed before using the appliance.
- **Check accessory:**
Open the accessory bag and check the accessories.
- ⚠ Should the appliance be moved, it must be transported vertically.

Accessory	Name	Quantity
	Vent Hose	1
	Manual	1

Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine. Whilst drying, the tumble dryer will expel a certain amount of warm, very moist air, and this should be removed from the room as quickly as possible to prevent condensation. In an extremely well ventilated room or close to an open window, this may occur naturally. However, in general, it is better to carry the dryer's exhaust outside via the vent hose supplied with the appliance; ending either temporarily at an open window, or permanently at a fixed ventilation grille, fitted to an exterior wall or window.

The tumble dryer must be installed in a clean place, where dirt does not build up. Make sure there are no obstructing items or material near the air-intake louvres provided at the back(e.g.paper,rags etc). To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

⚠ **Note** If the floor is uneven, adjust the adjustable feet. Do not put any wooden pieces or other objects under foot bases.


Level adjustment

When pushing down the edges of the dryer top plate diagonally, the machine should not move up and down at all.(please check both of two directions) if the machine rocks when pushing the machine top plate diagonally, adjust the feet again.

- Adjustable feet
- Adjust the adjustable feet to lower the dryer by turning right and to ascend it by turning left.


The feet must never be removed. Don't restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

⚠ **Important:** The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must there not be installed in floors which are not resistant to high temperatures.

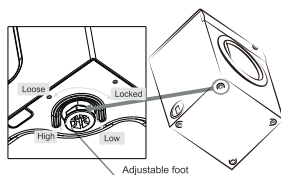

Fitting the vent hose

⚠ To simplify the installation, there is a choice of vent outlets: one at the back, the other in the left hand side. Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, aligning arrows of hose and ring nut, fastening by screwing hose to the direction of arrow and pushing it firmly back into place. The unused vents should now be sealed with the special snap cover(B) provided.

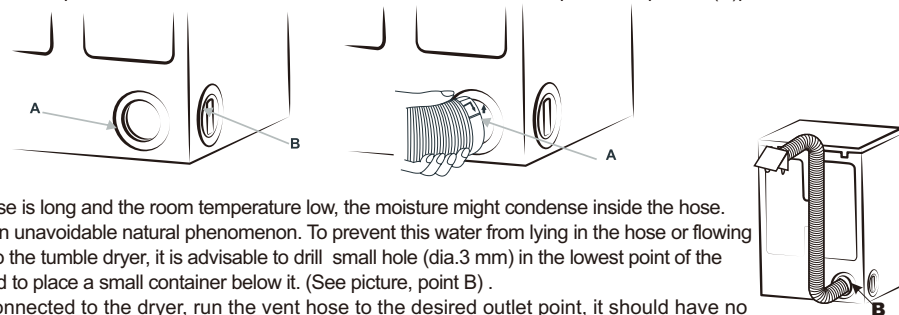

Advice:

If the hose is long and the room temperature low, the moisture might condense inside the hose. This is an unavoidable natural phenomenon. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (dia.3 mm) in the lowest point of the hose and to place a small container below it. (See picture, point B).

Once connected to the dryer, run the vent hose to the desired outlet point, it should have no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builder's merchant should be able to supply you with the necessary fittings and installation advice.

⚠ It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.

Note that to avoid condensation problems, it is essential that the dryer be fitted with the flexible hose to carry its waste outside the kitchen.

In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate.

Stacking kit

⚠ **Warning** THIS APPLIANCE MUST BE EARTHED.

Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:




- Green and Yellow-Earth
- Blue-Neutral
- Brown-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter ⊕ or by the earth symbol or coloured green and yellow.

⚠ **Warning**

- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection
In the case of permanent connection it is necessary that you install a double pole switch. The switch must not break the yellow and green earth cable at any point.

Packaging materials

- The materials marked with the symbol  are recyclable.
>PE<=polyethylene
>PS<=polystyrene
>PP<=polypropylene
- This means that they can be recycled by disposing of them properly in appropriate collection containers.
- Old machine
Use authorized disposal sites for your old appliance. Help to keep your country tidy!
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.
- The Symbol  mean: caution, risk of fire Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oilaffected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Ecological hints

To save energy and to help protect the environment, we recommend that you follow these hints:
Try to load the maximum capacity of the machine as small loads are uneconomical.

- Don't over-dry laundry, this avoids creasing and saves energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.


Standard guarantee conditions

- The manufacturer's warranty on this product, is only valid on the condition that:
- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- This guarantee is in addition to your statutory and other legal rights.

This guarantee does not cover


- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

Marking explanation

V	Volt	~	Alternating current
W	Watt	Hz	Hertz
	risk of fire		

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Electric diagram

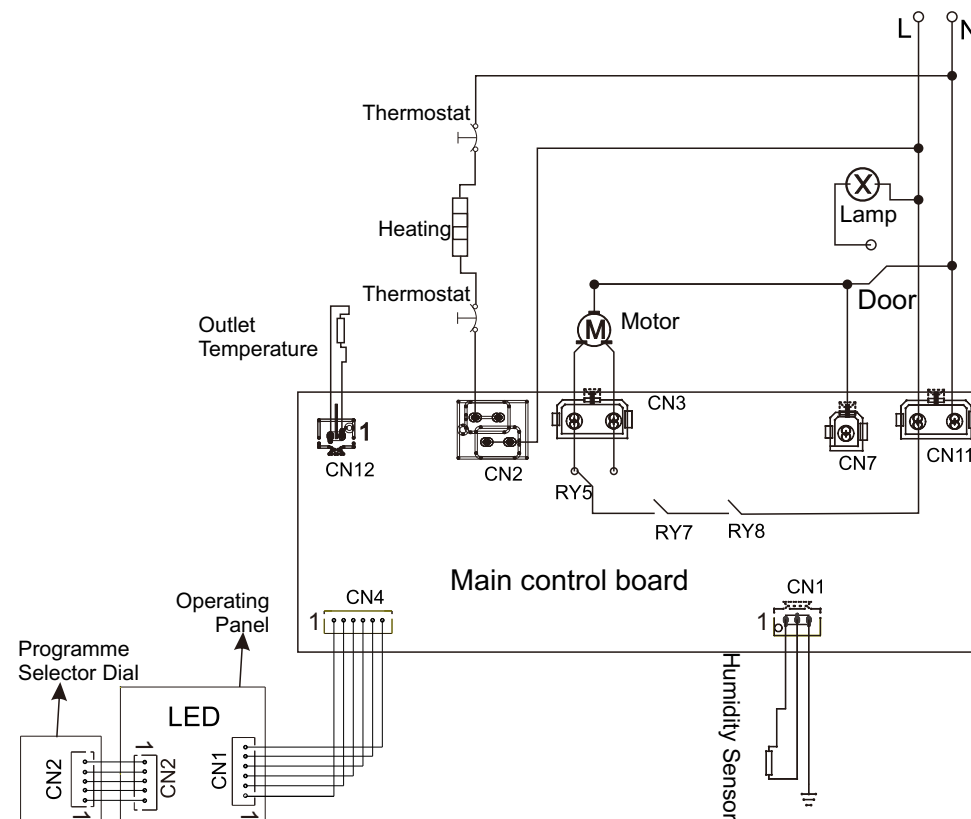

WARRANTY

1.1 In this warranty:

1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;

1.1.2 **Company** means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email admin@gsmretailgroup.com

1.1.3 **Consumer** means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Mistral product;

1.1.4 **Consumer Guarantees** means the guarantees under the Australian Consumer Law;

1.1.5 **You** means the Consumer.

1.2 Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.

1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Mistral product will be free of manufacturing defects and will perform to the Company's specifications.

1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Mistral product which is installed in a domestic household area.

*The in Home warranty does not apply to Commercial and or industrial usage. *Please See 1.7.7 for additional information

1.5 This warranty commences on the date of purchase of the Mistral product by the Consumer and continues for the benefit only of the Consumer until the expiry of two (2) year (**Warranty Period**).

1.6 If within the Warranty Period a manufacturing defect is discovered in the Mistral product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Mistral product or supply a replacement Mistral product free of charge. A replacement Mistral product may differ from the original product purchased by the Consumer.

1.7 This warranty will not apply to any Mistral product:

1.7.1 Installed by any person other than a qualified tradesperson; or

1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or

1.7.3 Operated in any way contrary to any operating or maintenance instructions; or

1.7.4 Improperly handled, installed or maintained; or

1.7.5 Altered or modified prior to or after installation; or

1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply

1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel/ motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure

FOR TECHNICAL ENQUIRIES CALL 1300 373 199 (AUSTRALIA) OR 0800 764 912 (NEW ZEALAND)

1.8 You must provide proof of your purchase of the Mistral product and the date of purchase in order to obtain the benefit of this warranty.

1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Mistral product for service nor the service agent's traveling costs to and from your home.

1.10 If you are required to transport the Mistral product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Mistral product prior to it being received by the Company or its service agent.

1.11 You will be responsible for all costs of returning a Mistral product to the Company and for redelivery of the Mistral product by the Company (whether it is the original or a repaired and/or a replacement Mistral product) and for any other expenses you incur in claiming under this warranty.

1.12 The Company or its service agent will examine any Mistral product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Mistral product in accordance with this warranty.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein. Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR TECHNICAL ENQUIRIES CALL
1300 373 199 (AUSTRALIA)
0800 764 912 (NEW ZEALAND)**

TO CONNECT YOU TO THE NEAREST AUTHORISED SERVICE CENTRE

G | S | M

Gerard Sourcing & Manufacturing
GSM RETAIL AUSTRALIA PTY LTD

The GSM Retail Australia Pty Ltd Group Companies has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for the GSM Retail Australia Pty Ltd. Group Companies

