



Mistral Breakfast Pack Matte Black



Instruction Manual
Model: MCP2868



1.7 Litre Stainless Steel Kettle



Instruction Manual

Model: MK320

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- This appliance is intended to be plugged in a standard domestic power outlet only.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.

- Do not use outdoors.
- Operate on a dry level surface; sinks, draining boards or uneven surfaces must be avoided.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Never insert utensils into the appliance.
- Caution should be taken when handling this appliance as some surfaces may be hot during and immediately after boiling. Severe burns may result from misuse.
- Allow to cool before cleaning.
- Do not use with an extension power cord.
- Store the unit indoors in a dry location.
- Do not operate under or near flammable materials, such as curtains, drapes or any other combustible materials.
- This product has been designed to heat water only.
- DO NOT OVER-FILL as boiling water may be ejected. The maximum level is marked on the water window.
- DO NOT UNDER-FILL. The minimum level is marked on the water window.
- Avoid contact with steam from the spout when water is boiling, or just after the kettle has switched off. Take care when opening the lid for re-filling when the kettle has recently boiled, as steam can burn.
- Extreme caution is necessary when moving any appliance containing hot water. Wait until the appliance has switched off automatically, or switch it off manually before moving it.
- Do not lift the lid while boiling water in the kettle.
- Do not fill the kettle when the appliance is on the power base.
- The kettle must only be used with the power base provided.
- Do not place the power base onto a metal tray or metal surface while in use.

CAUTION

- Do not operate the kettle on an inclined surface.
- Do not operate the kettle unless the element is fully immersed.
- Do not move the kettle while it is switched on.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.

FAILURE TO OBSERVE THESE CAUTIONS
MAY RESULT IN DAMAGE TO THE KETTLE

Warning

If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your 1.7 Litre Stainless Steel Kettle



Getting to Know Your 1.7 Litre Stainless Steel Kettle

Congratulations on the purchase of your new In My Kitchen 1.7 Litre Stainless Steel Kettle.

Before using your new kettle for the first time, it is extremely important that you read and follow the instructions in this use and care booklet, even if you feel that you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

This product has been designed to heat water only. Do not use this kettle to boil tea, milk, soup, etc.

Before First Use

Carefully unpack the kettle and power base and remove all packaging material. Wipe the body of the kettle with a soft, dry or damp, sponge or cloth.

How to Use Your 1.7 Litre Stainless Steel Kettle

Push the lid release button on handle to open the hinged lid of the kettle and fill with water to the desired level.

Take care not to fill above the "MAX" water level mark on the water window as water may eject from the kettle during boiling. Always fill using fresh water and discard any excess boiled water after use.

Push hinged lid of the kettle down to close.

Place the power base on a dry and level surface.

Place the kettle onto the power base.

Insert the power cord into a standard domestic power outlet and switch the power outlet on.

Switch the kettle on by pressing the "On/Off" switch to the "1" position. The power indicator light illuminates to indicate that the kettle is in use.

Do not remove the kettle from the power base whilst it is switched on.

Do not UNDER-FILL. Ensure there is enough water to reach the "MIN" mark on the water window.

When the water has boiled, the kettle and the power indicator light will switch off automatically. Water can be brought back to the boil by pressing the "On/Off" switch to the "1" position again.

PLEASE NOTE: If the kettle has recently boiled and switched off automatically, it may be necessary to wait for approx. 15 seconds before the switch can be reset.

Do not force the "On/Off" switch to the "1" position.

You can stop the boiling process at any time by moving the "On/Off" switch to the "0" position.

Care and Cleaning

Before cleaning, turn off the power outlet and unplug the power cord.

Wait for the kettle to cool before cleaning it, if it is hot.

Wipe the exterior of the kettle with a soft, damp cloth or sponge.

Remove stubborn spots using a cloth moistened with mild detergent. Do not use steel wool or abrasive cleaners. Do not put detergents or cleaning agents in the kettle.

Buff the body with a soft, dry cloth.

Do not leave the kettle in direct sunlight as doing so may affect the quality of the finish.

Removing Calcium Deposits

In order to maintain the performance of your kettle, it is important to remove built-up deposits inside the kettle. To descale your kettle you can use a descaler available from most leading retail outlets, or use the following process:

1. Half fill the kettle with ordinary tap water.
2. Add 30ml (1 oz) of white vinegar to the kettle.
3. Boil the mixture and leave to stand for 30 seconds before emptying the kettle.

Repeat steps 1 to 3 twice.

4. Empty the mixture and rinse the kettle well.

Note: For extreme build-up, this procedure may need to be repeated. Alternatively, leave the mixture in the kettle over night.


Cleaning the Filter

Open the lid of the kettle.

Hold the filter, push it towards inside, and lift the filter to upwards and out of the holder.

The filter can then be rinsed under the tap or gently washed with a cloth.

To re-insert the filter, align the filter to the spout, push it towards outside, the filter locker lock into the spout holder.

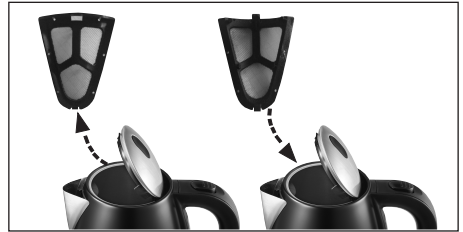

Specifications:

Power Supply:220-240V~ 50Hz
Power Consumption:..... 1850-2200W
Capacity:..... 1.7L

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.
Mistral is a registered trademark of GSM International Ltd.

Cat. No. MK320
September 2020



2 Slice Stainless Steel Toaster



Instruction Manual

Model: MT325

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE TOASTER. Doing so could cause damage to the Toaster and is a serious safety hazard.
- Contact with the elements inside the Toaster could result in electric shock. To free broken or burnt toast, unplug the Toaster from the power outlet and turn it upside-down.
- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.
- Do not touch the hot surfaces of this appliance. Do not touch the metal body of the Toaster during or immediately after operation, as it will be hot. Severe burns may result from misuse.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- Do not use with an extension power cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Do not cover bread slots while the Toaster is in use.
- Do not operate the Toaster without bread.
- Do not operate under or near flammable materials, Such as curtains, Drapes and any other combustible materials.
- Do not attempt to heat metal or foil packages in the Toaster.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not allow bread crumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.

Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your 2 Slice Stainless Steel Toaster



Getting to Know Your 2 Slice Stainless Steel Toaster

Congratulations on the purchase of your new 2 Slice Stainless Steel Toaster.

Before using your new 2 Slice Stainless Steel Toaster for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

The appliance has build in High lift function, you can uplift the carriage lever a little to remove the bread conveniently.

How to Use Your 2 Slice Stainless Steel Toaster

Before using the appliance for the first time, carefully unpack and remove all packaging material.

Plug the Toaster into a standard domestic power outlet and switch the power outlet on.

Place bread into the bread slots and press the lever down until it locks into position.

When your Toaster is heated for the first time, it may emit slight smoke or odour. This is normal and should disappear after 1 or 2 uses.

Note: The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.

Adjust the variable browning control to the desired toast colour setting. Choose a setting based on the type of bread you are toasting and your personal preference. Start on a medium setting (3-4) and adjust the variable browning control to a lighter setting (1-2) or darker setting (5-7).

Note: The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.

When toasting is completed, the toast will pop up and the Toaster will switch off automatically. Toasting may be interrupted during the cycle by pushing the Cancel button. Toasting will stop and the toast will pop-up.

The appliance has build in high lift function, you can uplift the carriage lever a little to remove the bread conveniently.

Allow the Toaster 15 to 20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat to reset for the next toasting cycle.

Note: Do not touch the Toaster walls when the Toaster is in use.

WARNING: Do not leave toaster unattended when it is in use as toast may jam or wedge in the bread carriage.

Note: Do not use a knife or another sharp metal tool to remove bread from the toaster and do not touch the metal internal parts of the toaster.

Reheat Button

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.

Cancel Function

The toasting cycle can be stopped at any stage by pressing the Cancel button. The toast will pop up and the Toaster will switch off automatically.

Defrost Function

The defrost function is useful for thawing and toasting frozen bread all in one operation. Adjust the variable browning control to the desired toast colour setting. Start on a medium setting (3) and adjust the variable browning control to a lighter setting (1-2) or darker setting (4-5) depending on your personal preference.

Place bread or crumpets into the bread slots.

Press the lever down to the locked position and press the defrost button. The defrost light will illuminate.

When thawing and toasting is complete, the toast will automatically pop-up and the Toaster will switch off automatically.

The appliance has builded in High lift function, you can uplift the carriage lever a little to remove the bread.

Care and Cleaning

Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.

Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the brushed chrome finish.

The crumb trays will need to be cleaned occasionally. Slide out the crumb tray from the toaster, empty and place it back in the toaster before using it again.

Note: Do not try to clean the inside of the Toaster, as this may damage the heating elements. Water and liquids must never enter the Toaster.

Specifications:

Power Supply:220-240V~ 50Hz
Power Consumption:..... 900W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.
Mistral is a registered trademark of GSM International Ltd.

Cat. No. MT325
January 2021