



Hair Dryer



Instruction Manual

Model: MHDR145

Important Safeguards

To prevent electrical shock, personal injury or property damage, read and follow all instructions and warnings.

Warning:

When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off. When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER-As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, "unplug it" immediately, Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING-TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FLRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by GSM.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Never block the air openings of this hair dryer or place it on a soft surface, such as a bed or couch, where the air openings may become blocked. Keep the air openings free of lint, fluff and hair.
- The air inlet and outlet openings should never be obstructed. If however, the airflow is inadvertently obstructed during use, the built in thermal cut out will automatically switch off the appliance.
- To protect from possible overheating, this appliance is equipped with a safety thermostat. Should it cycle ON & OFF during use, turn the main switch to "OFF" and let it cool down before using the appliance again.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull cord. Never carry the appliance by the cord.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.
- When drying your hair in rollers, do not allow any clips, hairpins etc. to project more than 10mm (finger width) so as to ensure that they cannot come into contact with the live parts inside the appliance.

- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- **Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.**

Save These Instructions

MHDR145 Hair Dryer Use & Care Instruction Manual

NOTE: Check that all accessories are included and undamaged.



 
Heat settings



Cool shot button



Speed settings



Your Hair Dryer

Congratulations on the purchase of your new Hairdryer.

Before using your new Hairdryer, it is important that you read and follow the instructions in this Use & Care booklet, even if you feel that you are quite familiar with this type of appliance. Find a place and keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with "Important Safeguards".

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

USING YOUR HAIR DRYER BEFORE FIRST USE

- Carefully unpack the Hairdryer and remove all packaging material.
- Make sure that your Hairdryer is clean and undamaged.



OPERATION

NOTE: Before using for the first time, switch the device on for a few minutes and allow it to run at the highest speed and temperature settings. As a result of the manufacturing process, a slight odour may be produced. This is not harmful and only occurs during initial use. Ensure that the room has good ventilation.

SWITCHING ON/OFF AND CONTROLLING SPEED

Insert the mains plug into an easily accessible socket.




The on/off switch and switch for the speed settings allows you to switch the device on and select the desired speed for the air flow:

- 0 = off
-  = low air flow
-  = strong air flow

After drying, set the on/off switch to 0 (off) and pull out the mains plug.

SELECTING TEMPERATURE

The switch for the hot air settings allows you to select the desired temperature for the air flow:

-  = low temperature
-  = medium temperature
-  = high temperature

COOLING FUNCTION ❄️

In order to improve the durability of the hair style, you can use the button ❄️ to cool the section of hair after it has been styled using hot air.

Keep the ❄️ button held down during the drying process in order to receive a cool air flow independently of the temperature setting.

When you no longer require the cool air flow, release the ❄️ button.

CONCENTRATOR NOZZLE

The concentrator nozzle makes it possible to target the air flow at specific sections of hair.

Attach the concentrator nozzle to the front of the hair dryer so that it clicks into place.

The concentrator nozzle can be rotated into any desired position.

You can remove the cooled concentrator nozzle from the hair dryer.

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture

QUICK DRYING

Select a high heat & high speed setting and roughly dry your hair. Use a brush or your hand to shake out excess moisture whilst drying and keep the hair dryer in constant motion.

STRAIGHTENING

Select high heat and high speed and roughly dry the hair. When the hair is nearly dry, attach the concentrator nozzle (which minimises frizz) and reduce the heat & speed, Section the hair according to thickness and begin with straightening bottom layers first. Using a brush, follow concentrator from above, while slowly gliding down each section of hair from roots to tips. Once bottom layers have been straightened, straighten the mid-section and complete by straightening top layers.

NATURAL WAVY TEXTURE

Using a low heat and low speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand while directing airflow through your fingers. Once you have reached the desired effect, use the cool shot on each section of hair to hold the style. For more volume lean forward and dry the hair in the upside down position.

LIFT&VOLUME

Use the hair dryer on a low heat and speed setting, work from the roots of hair and begin at the back of the head. Section your hair and use a brush to dry against the natural growth pattern of your hair. This creates lift at the roots, which creates a style with volume.

STYLING

Set the hair dryer to a low heat and low speed setting and attach the concentrator nozzle for precision drying. Section the hair and style using the brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2-5 seconds on each section while curling under or over for additional hold.

USER INSTRUCTIONS

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet openings. In the event that the hair dryer stops during use turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet openings are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

MAINTENANCE

Your hair dryer is designed for household use and is virtually maintenance free. No lubrication is needed. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

- Be particularly sure to check that the air inlet and air outlet are free from dust, hairs and fluff.
- Wipe down the casing, the safety mesh over the air inlet and the styling nozzle with a slightly damp cloth.
- Remove the styling nozzle from the hair dryer. Hold the hair dryer with the air outlet facing downwards. Clean the safety fins with a brush.
- Slightly press the safety mesh on the sides and then pull it off. Hold the hair dryer with the air inlet facing downwards. Clean the inside and outside safety mesh with a brush.



STORAGE

When not in use, always unplug the hair dryer from the power outlet. Allow the hair dryer to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the hair dryer since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it, you may also use the hang loop to store the hair dryer within convenient reach, ensuring that water cannot be splashed on to it when it is hung up.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Specifications

POWER SUPPLYAC 220-240V ~ 50Hz

POWER CONSUMPTION.....1800-2200W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.
Mistral is a registered trademark of GSM International Ltd.

Cat. No. MHDR145
September 2020