 


mīstral

INSTRUCTIONS MANUAL

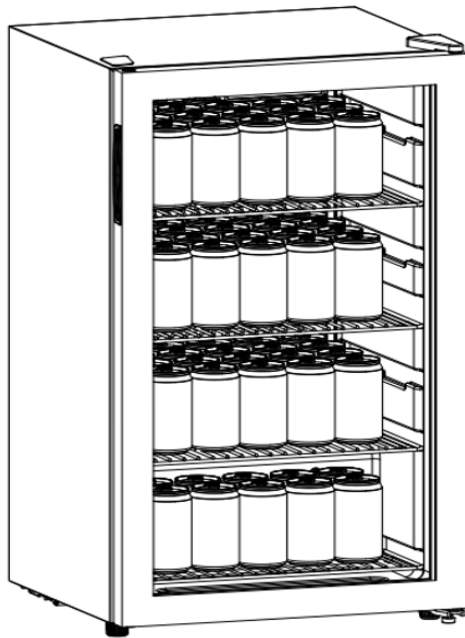

85L Free Standing Bar Fridge

Model: MBF669B | MBF669B-F

GSM Retail Australia Pty Ltd ABN: 53 007 682 475

For Warranty and technical queries: Australia 1300 373 199

For Warranty and technical queries: New Zealand 0800 764 912

www.mistral.com.au

V1 June 2024

Thank you

This Mistral 85L Free Standing Bar Fridge carries a 1 year warranty, be sure to retain your installation and user manual and receipt.

For technical queries please contact

Aust: 1300 373 199

NZ: 0800 764 912

TABLE OF CONTENTS

SAFETY INSTRUCTIONS & WARNINGS.....	1
DESCRIPTION OF THE APPLIANCE.....	4
ACCESSORIES & NAME.....	4
REVERSING THE DOOR.....	5
INSTALLATION & OPERATION.....	6
TROUBLESHOOTING.....	10
MAINTENANCE AND CLEANING	11
TECHNICAL PARAMETERS.....	12

Safety instructions & warnings

Your safety is of the utmost importance to our company. Please make sure that you read this instruction booklet before attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Technical Department.



Prohibition



Warning



Caution



Caution

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended for HOUSEHOLD USE ONLY and not for commercial or industrial use.



Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the storage compartments of the appliance, unless they are of the type recommended by the

manufacturer.

- Make sure that the appliance is connected to power supply in accordance with the rating label.
- Use an independent grounded socket with 10A or higher, do not connect to transformer or socket with multiple outlets.
- Make sure socket is grounded properly and do not modify power cord & plug.
- Connect power plug with socket firmly in case of possible risk of fire.
- Plug should be within reach for easy disconnection after the appliance positioned in case of accidents occurred.
- Do not store or burn gasoline or other inflammables near the appliance in case of possible fire.
- Do not store inflammables, explosives, acid & alkaline liquids etc.in the compartment of the appliance.
- Do not operate other appliances in the compartment.

Child Safety

- Do not allow child play inside the appliance in case of entrapment.
- Do not allow child hang on the door to play in case of falling of the appliance.
- Do not allow child reach into compressor compartment or touch metal components at rear of the appliance in case of possible injury.

Keep away from water

- Do not spray water on the appliance or wash the appliance by pouring or filling water in case of invalid insulation and possible electric shock.

Be careful of freezing

- Do not touch surface of the liner inside the compartment, especially with wet hand, in case of frozen injury while the appliance is in operation.

Do not open the door for long periods

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

Modification on the appliance not allowed

- Do not reconstruct the appliance by yourself which might cause damages to the appliance.

Unplug the appliance under certain conditions

- Unplug the appliance before cleaning & maintenance.
- Unplug the appliance when power cut occurred.

Disposal of the appliance

- Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas.
- Before you scrap the appliance, please take off the doors to prevent children trapped.
- Send the appliance to the designated disposal location.
- When setting the sub-zero temperature, the food and beverages placed inside the product may freeze, which can easily cause glass bottles and fragile containers to break.



Prohibition.

Do not damage the power cord

 
- Do not disconnect the appliance by pulling power cord rather than pulling the plug.
- Do not set the appliance above the power cord or step on the cord intentionally.
- Put the power cord at right place when moving the appliance.

When the power cord is damaged

- Do not use damaged power cord, and get it replaced immediately by manufacturer service agent or by qualified electrician.
- If needed, extend the power cord with cord of 0.75mm² or bigger by qualified electrician.

Description of the appliance

Accessories & name

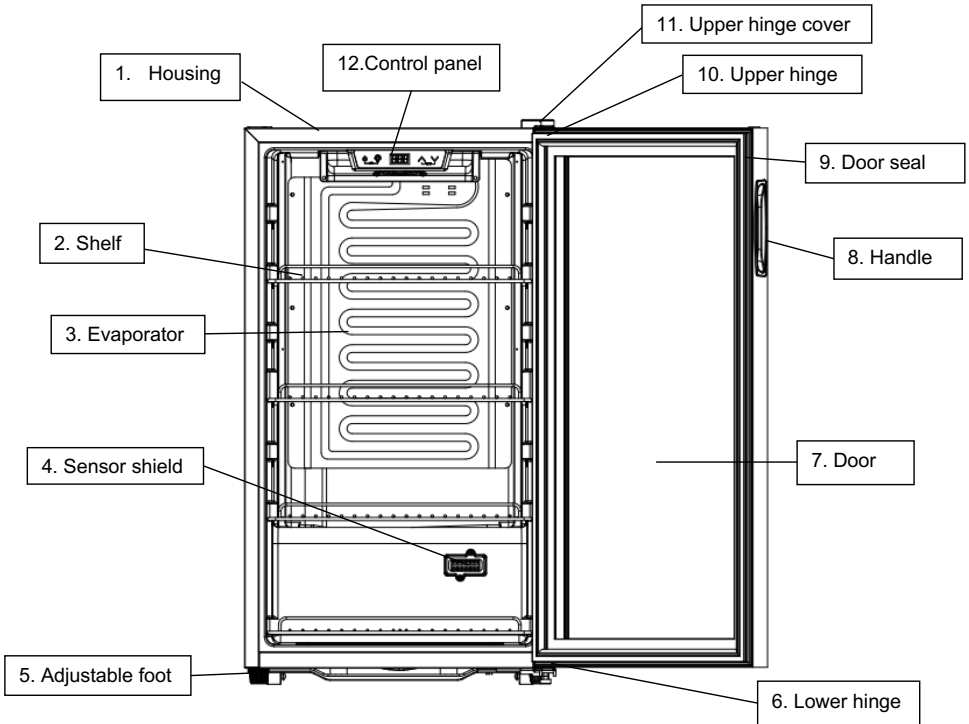


Note: Shelves, door frame, handle and other accessories could be different according to different models and configuration.

All photos in this manual are for reference. The appliance you buy might not be exactly the same as shown here. Please refer to the actual product.

Reversing the door

 1. Parts for door reversing

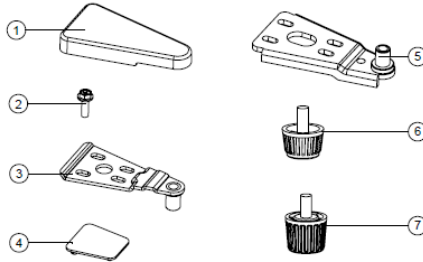

- ① Door hinge cover ② Flange screw ③ Door hinge ④ Cap
⑤ Lower door hinge ⑥ Short cabinet foot ⑦ Height cabinet foot

2. Reversing the door

Our wine coolers are delivered with the door opening from left to right. To reverse the opening direction:

 
1) Close the door.

 
2) Take off the door hinge cover

① on the up right corner; Unscrew the flange screws②; Take off door hinge③; Remove the up left side cap④.

3) Lift the door up until the door gets off the lower door hinge⑤.


4) Unscrew the lower door hinge. Remove the short cabinet foot⑥ and height cabinet foot⑦.

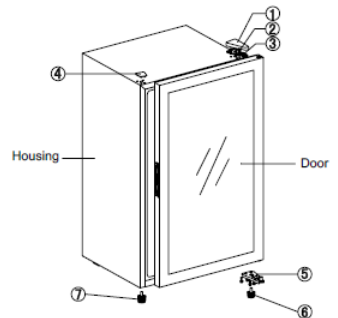

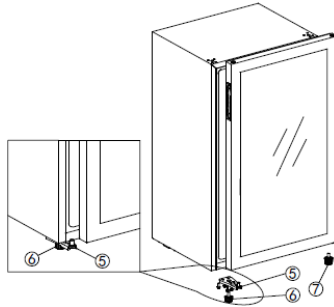

5) Fit the lower door hinge (5) to the down left corner; Install the short cabinet foot (6) and the height cabinet foot (7). Put the door above and insert into the lower door hinge.

 
6) Fit the door hinge (3) to the up left corner and screw the flange screws (2); Put on the door hinge cover (1); Put the cap to the up right side (4).

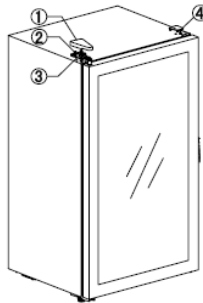

Installation & operation

Position

Do not lean the appliance over 45° when moving it to position.

 The appliance must be put on flat, firm & dry floor or similar non-combustible pad; do not use the package foam pad.

- ⓘ Do not put the appliance in a wet place.
- ⊘ Do not use the appliance in a frozen place.
- ⊘ This is an indoor appliance, Do not use it outdoor.

Start operation

1. Cleaning the compartment

Before power on, clean inside of the appliance and check the drainage pipe in good connection. (For details, please refer to the “Maintenance and cleaning”)

 
2. Placement

Before power on, level the appliance on the firm & dry floor for at least 3 hours.

3. Power on

The appliance start operation and it will cool down inside after 1 hour, otherwise you should check the power connection.

Control panel



All keys will be invalid if in lock mode. Please unlock first.

ON/OFF

1. In the unlock state, hold down the on/off key for 3 seconds to power down, unit will go into stand-by mode.
2. Hold down the on/off key again 3 seconds to return unit back to normal working operation.



Light

Press the key, turn on or turn off the LED lights inside. In stand-by mode, this key is invalid.



UP

In the case of unlocking, press the key once, and the LED display screen will start flashing, displaying the current set temperature. Continue to press to adjust the set temperature. Pressing once can increase the temperature by 1 °C. If the pressing is not detected again for 5 seconds, the flashing will stop, and the new set temperature will be saved.



Down

In the case of unlocking, press the key once, and the LED display screen will start flashing, displaying the current set temperature. Continue to press to adjust the set temperature. Pressing once can decrease the temperature by 1 °C. If the pressing is not detected again for 5 seconds, the flashing will stop.



Child Lock (Combination key)

1. Lock: Press both keys at the same time for 3 seconds to lock.
2. Unlock: Press both keys at the same time for 3 seconds to unlock.



Fahrenheit/Celsius display interchange

Switch temperature display between Fahrenheit and Celsius by pressing both keys at the same time for 2 seconds.



Attention

 
1. The cooling temperature could be set from **0°C-10°C**.
2. Alarm sound: when a system malfunction occurs and alarm sounds, press any key on the control panel to cancel the alarm sound.

3. Error code:

If the temperature sensor failures occur, error code displays: E1 for open circuit; E2 for short circuit.

Beverage storage

- This appliance is equipped with chromed wire shelves to store your beverages.
- 3+1 chromed wire shelves loading capacity: **70** cans. (standard Coca Cola can with 66x123H(mm))

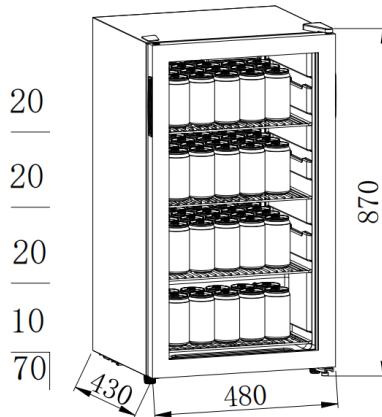

- Loading capacity will vary in terms of different way of cans arrangement or different can sizes.
- Each shelf can pull out partly to store cans easily.
- Open the door wide enough before pulling out shelves.
- If the beverage cooler is not in use for long periods of time, it is recommended to power it off, clean it carefully, and open the door for ventilation.

Troubleshooting

The appliance is makes lots of noise ?	<ul style="list-style-type: none"> • Please adjust the front foot, keep the appliance levelling. • Please keep a bit of space between appliance and walls.
Liquid flowing sound inside the cabinet ?	<ul style="list-style-type: none"> • This is normal because of the refrigerant working inside.
The appliance does not start ?	<ul style="list-style-type: none"> • Make sure the appliance is connected to the power properly. • Make sure switch on the power. • The compressor re-starts after 5 minutes for a power cut.
Compressor runs continuously ?	<ul style="list-style-type: none"> • If no cold air is being produced, call the after-sale service.
Door does not seal tightly ?	<ul style="list-style-type: none"> • After a long period of use, the door seal might get stiff & distorted partially. <ol style="list-style-type: none"> 1. Heat the door sea slightly with heat gun or with or hot towel. 2. The door seal will soften and then close the door.
The appliance does not cool sufficiently ?	<ul style="list-style-type: none"> • Please adjust temperature setting. • Keep the appliance away from sunlight or heat. • Please do not open the door frequently.
Unpleasant smells inside cabinet ?	<ul style="list-style-type: none"> • A little bit of plastic smell for newly purchased appliance is normal and will disappear after a short time. • Clean the compartment and ventilate it for a few hours.
Condensate on the glass door ?	<ul style="list-style-type: none"> • Please do not open the door frequently or for a long time. • Please do not set the temperature too low. • High ambient temperature and humidity would cause condensate.
The light is not working ?	<ul style="list-style-type: none"> • Check the power supply first. • Call the retailer's after-sale service if the

light is broken.

Maintenance and cleaning

Cleaning

- Disconnect the appliance before cleaning.
- Clean the appliance with soft cloth or sponge by water.
- Do not use organic solvents, alkaline detergent, boiling water, washing powder or acid liquid etc.
- Do not flush the compartment of the appliance.
- Clean regularly surfaces that can come in contact with accessible drainage systems.

The below items will damage the surface of beverage cooler:



Power cut

Most power cuts could be resolved within a short time. To protect your beverage during a power cut, avoid opening the door as much as possible. During very long power cuts, take the necessary measures to protect your beverage.

Out of service for long time

 
Remove all beverage from the appliance, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.



If the appliance is disconnected or if there is a power cut, you must wait at least five minutes before re-starting.

Moving the appliance

- Cut off the power supply and unplug the appliance.
- Remove all beverage from the appliance.
- When moving the appliance, do not lean the appliance over 45°.

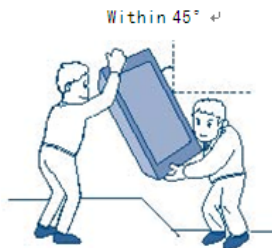

Technical parameters

Product model	MBF669B/MBF669B-F
Voltage/frequency	220-240V/50HZ
Refrigerant/weight	R600a / 23g
Effective volume	85 L
Loading capacity	70 cans
Net weight	27.5kg
Unit dimension (WxDxH)	480×430×870mm
Packing dimension (WxDxH)	512x466x890 mm

Remarks:

1. The Net weight includes shelves, and the Unit dimension is without handle on the door.
2. The manufacturer reserves all the rights to change the above parameters without prior notice. Please refer to the nameplate of your appliance.
3. Loading capacity will vary in terms of different way of cans arrangement or different can sizes.

Warranty

1.1 In this warranty:

- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
- 1.1.2 Company means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email admin@gsmretailgroup.com
- 1.1.3 Consumer means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Mistral product;
- 1.1.4 Consumer Guarantees means the guarantees under the Australian Consumer Law;
- 1.1.5 You means the Consumer.

1.2 Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.

1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Mistral product will be free of manufacturing defects and will perform to the Company's specifications.

1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Mistral product which is installed in a domestic household area.
*The In Home warranty does not apply to Commercial and or industrial usage.*Please See 1.7.7 for additional information

1.5 This warranty commences on the date of purchase of the Mistral product by the Consumer and continues for the benefit only of the Consumer until the expiry of 1 (one) year (Warranty Period).

1.6 If within the Warranty Period a manufacturing defect is discovered in the Mistral product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Mistral product or supply a replacement Mistral product free of charge. A replacement Mistral product may differ from the original product purchased by the Consumer.

1.7 This warranty will not apply to any Mistral product:

- 1.7.1 Installed by any person other than a qualified tradesperson; or
- 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
- 1.7.3 Operated in any way contrary to any operating or maintenance instructions; or
- 1.7.4 Improperly handled, installed or maintained; or
- 1.7.5 Altered or modified prior to or after installation; or
- 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply
- 1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure.

- 1.8 You must provide proof of your purchase of the Mistral product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Mistral product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Mistral product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Mistral product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Mistral product to the Company and for redelivery of the Mistral product by the Company (whether it is the original or a repaired and/or a replacement Mistral product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Mistral product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Mistral product in accordance with this warranty.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your purchase receipt/invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors there in. Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that

**FOR TECHNICAL ENQUIRIES CALL
1300 373 199 (AUSTRALIA)
0800 764 912 (NEW ZEALAND)**

TO CONNECT YOU TO THE NEAREST AUTHORISED SERVICE CENTRE

G | S | M

Gerard Sourcing & Manufacturing

GSM Retail Australia PTY LTD

GSM Retail Group has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Australia Pty Ltd. Group Companies

