
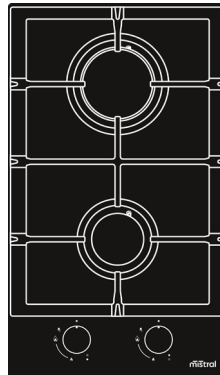
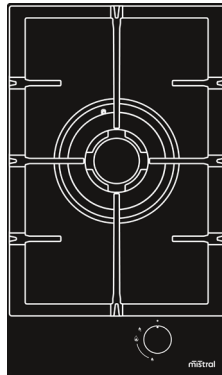


mīstral

Glass Built in Gas Cooktop

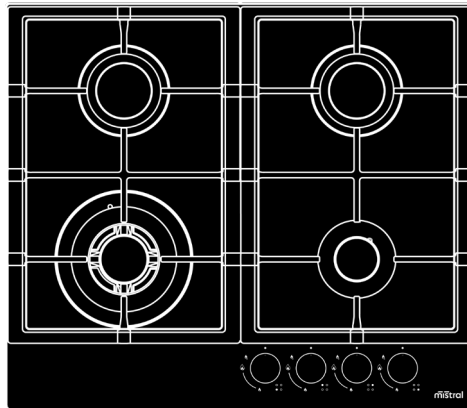

Instruction Manual

Model: MBCG633-4G & MBCG633-4G-F
MBCG332-2G & MBCG332-2G-F
MBCG331-1G & MBCG331-1G-F

v3 December 2025

Thank you.

When you step up to a Mistral product, you can rest assured you're making the better choice. Because when you buy a Mistral product you're buying a brand Australian Households have trusted since 1968.

This Mistral appliance carries a 3 year in home warranty, be sure to retain your user manual and receipt.

For all warranty and technical queries please phone:

AUS: 1300 373 199

NZ: 0800 764 912



Contents

Safety Instructions	4
Warnings	4
Product Description	6
Installation	8
Using Your Appliance	12
Warning Symbols	13
Maintenance	14
Troubleshooting	15
Preventing Glass Cracks	16

Safety Instructions

This manual explains the proper installation and use of your appliance, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference. In case of failure, only the Authorized Technical Service may repair this hob. Otherwise the guarantee will be null and void. All Mistral Appliances are for domestic use only.

Warnings

General Safety

- An authorised service person must install this appliance and **MUST** provide a Certificate Of Compliance. This certificate should be retained along with your proof of purchase.
- Built-in appliances may only be used after they have built in to suitable built-in units and work surfaces that meet local authority standards.
- In the event of faults with the appliance or damage to the glass ceramic (cracks, scratches or splits), the appliance must be switched off and disconnected from the electrical supply, to prevent the possibility of an electric shock.
- Repairs to the appliance must only be carried out by trained registered authorized service persons / engineers.
- The technical and identification data for the hob is located on the reference data plate fixed to the underside of the appliance.
- This reference data plate must be consulted before making the electrical connections.
- The electrical connections must be made by specialist installers to the legal and regulatory requirements in each country.
- If the cable is damaged in any way it must be replaced by the manufacturer or after sales service or by authorized technical staff, to avoid hazard.
- This appliance is not suitable for boat or caravan installation.
- This appliance is not suitable for outdoor use.
- Do not place articles on or against this appliance.

Correct Use

- People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person.
- This appliance should be used only for normal domestic cooking and frying of food.
- The appliance must not be used as a work surface or as a storage surface.
- Additions or modifications to the appliance are not permitted.
- Do not place or store flammable liquids, highly inflammable materials or fusible objects (e.g. plastic film, plastic, aluminum) on or near the appliance.
- Do not heat an empty pan on the appliance.

Children's Safety

- The cooking zones will become hot when you cook. Therefore, always keep small children away from the appliance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

Safety During Use

- Remove stickers and film from the glass surface.
- There is the risk of burns from the appliance if used carelessly.
- Cables from electrical appliances must not touch the hot surface of the appliance or hot cookware.
- Overheated fats and oils can ignite very quickly. Warning! Fire hazard!
- Switch the cooking zones off after each use.
- Users with implanted pacemakers should keep their upper body at least 30 cm from cooking zones that are switched on.
- Risk of burns! Do not place objects made of metal, such as knives, forks, spoons and saucepan lids on the cooking surface, as they can get hot.

Safety During Installation

- Do not use or store flammable materials in the appliance storage drawer or near this appliance.
- Do not spray aerosols in the vicinity of this appliance while it is in operation.
- This appliance shall not be used as a space heater.
- This hotplate must be installed in accordance with:
 - AS 5601 – Gas Installations (for Australia) – current edition
 - NZS 5261 – Code of Practice for the Installation of Gas Burning Appliances and Equipment (for New Zealand) This standard may not be now current!!
 - Local gas fitting regulations
 - AS/NZS 3000 – Electrical Installations (Wiring Rules)
 - Building codes
 - Any other relevant statutory regulations.
- Check the gas type label on the underside of the hotplate, adjacent to the gas connection to ensure it corresponds to the installation gas supply. If in doubt contact the supply authority.
- The power supply cord (supplied) must not touch against any hot surfaces and must be placed so that its temperature does not exceed 75 degrees at any point along its length.
- After connecting to gas, check for leaks using soapy solution, never a naked flame.
- Where a flexible hose assembly is used, ensure it is approved to AS/NZS 1869, Class B10mm diameter and no more than 1.0 metre in length.
- Any hose assembly used must be restrained from accidental contact with the flue outlet of an under bench oven.

How To Avoid Damage To The Appliance

- The glass surface can be damaged by objects falling onto it.
- The edge of the glass ceramic can be damaged by being knocked by the cookware.
- Cookware made of cast iron, cast aluminum or with damaged bottoms can scratch the glass surface if pushed across the surface.
- Objects that melt and things that boil over can burn onto the glass surface and should be removed straight away.
- Do not use the cooking zones with empty cookware or without cookware.
- To avoid damaging cookware and glass ceramics, do not allow empty saucepans or frying pans to keep heating by the hob.
- The ventilation gap of 5mm between the worktop and front of the unit underneath it must not be covered.
- Do not modify this appliance.

Safety When Cleaning

- For cleaning, the appliance must be switched off and cooled down.
- For safety reasons, the cleaning of the appliance with steam jet or high pressure cleaning equipment is not permitted.


Disposing Of the Device

When disposing of the device, do not bring it to regular municipal waste containers. Instead, bring it to electrical and electronic waste recycling and reuse center. A relevant label has been put on the device, its instructions manual, or the package. The device has been manufactured of recyclable material. By bringing old device to recycling collection center, you show that you care about nature. Ask your local environmental care authority for information on location of such facilities.




Product Description


MBCG633-4G-F & MBCG633-4G

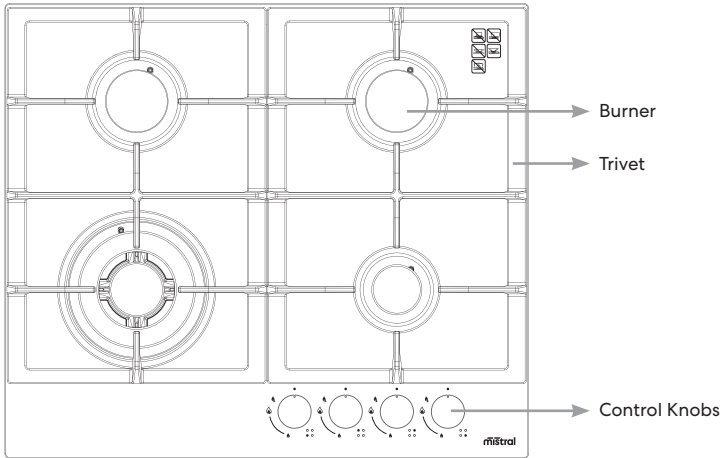

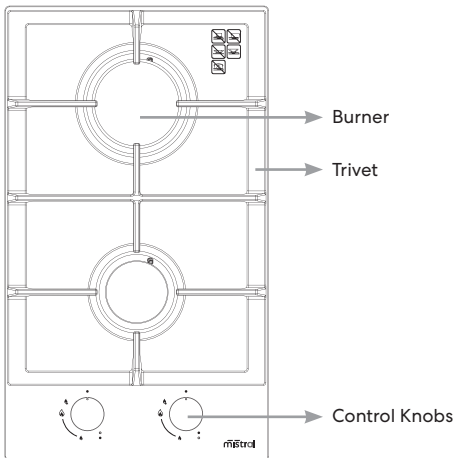


MBCG332-2G-F & MBCG332-2G

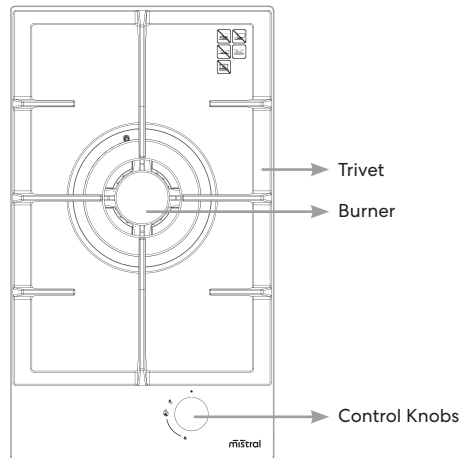


MBCG331-1G-F & MBCG331-1G



Accessories Bag

Description	Picture	QTY	
User Manual		1	
Sealing Tape		1 roll	
Additional Labels	You have additional rating label in accessory bag, suggest attach it onto a surface where it can be read e.g. inside surface of adjacent cupboard	1 set	
Installation Clip	 <small>MBCG331-1G/-F & MBCG332-2G/-F MBCG633-4G/-F</small>	4 sets	
Screws ST4.2x24		5 pcs	
LPG Injectors		MBCG633-4G(-F)	0.55mm x 1 0.7mm x 2 0.98 mm x 1
		MBCG332-2G(-F)	0.7mm x 1 0.90mm x 1
		MBCG331-1G(-F)	0.98mm x 1
Elbow & Washers		1 Elbow, 3 Washers	
Natural Gas Regulator		1	

Model	Product Dimensions (h x w x d) mm	Cut-out Size (w x d) mm	Approx. Net Weight	Electrical Connection	Rated Input Power
MBCG633-4G/-F	100 x 584 x 510	552 x 470	13.7 kg	220-240V/50Hz	0.5W
MBCG332-2G/-F	100 x 294 x 510	266 x 478	7.2 kg	220-240V/50Hz	0.5W
MBCG331-1G/-F	100 x 294 x 510	266 x 478	7 kg	220-240V/50Hz	0.5W

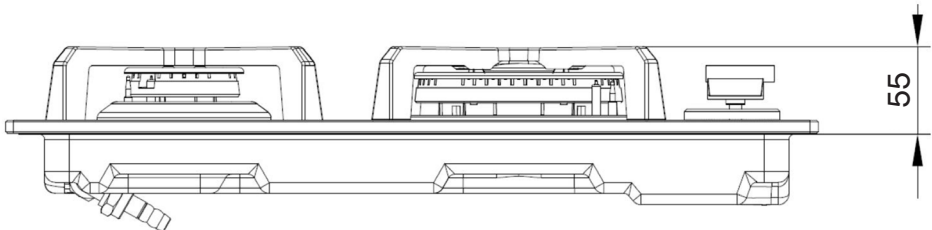

NOTE: On completion of the installation of the cooktop to the kitchen bench, the distance from benchtop surface to the highest part of any trivet is 55mm as shown in illustrations.

Installation

Before Installation:

Before cutting into any bench tops, ensure the minimum clearances to walls, adjacent surfaces and overhead surfaces required by the relevant gas appliance installation code (see above) will comply. Dimensions are specified in millimeters (mm)

- Overhead cupboards and range hood = 650 mm.
- Side and rear clearance = 200 mm to any burner edge.
- Overhead exhaust/ceiling fan = 750 mm
- Horizontal surfaces adjacent the hob = less than or equal to the hob height.
- Ensure there is sufficient clearance to fit the regulator and/or flexible hose connection with the hotplate in the installed position.

Where range appliance or rangehood is replaced, the overhead clearance from the highest part of the highest burner of the appliance (or hob) to the rangehood shall not be less than 600mm unless the appliances manufacturer's instructions specifies a greater clearance.

When you have installed the hob, make sure that:


- The GPO (general-purpose outlet) must always be in an accessible position.
- The supply connection point, test point and natural gas regulator adjustment screw (for Natural gas installation) are accessible for testing and/or adjustment with the hotplate in the installed position.

TO BE INSTALLED ONLY BY AN AUTHORIZED PERSON


Cut Out Dimensions

Bench top thickness: 30-40mm

MBCG633-4G/-F


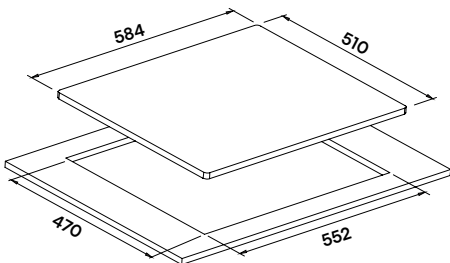


MBCG332-2G/-F & MBCG331-1G/-F

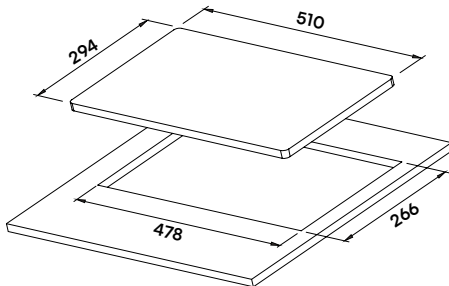

Place Burner Box


- Apply the adhesive sealing tape to the underside lip of the burner box. Shown at G below.
- Place burner box into cutout hole and fit clamping brackets to clamp the hotplate to the bench.
- Installation of clips:
 - Put the clip inside the edge of the hole
 - Fix the installation bracket with screw

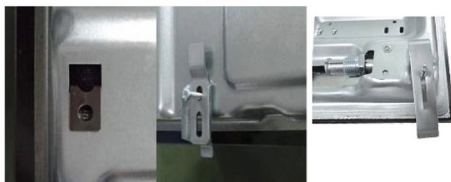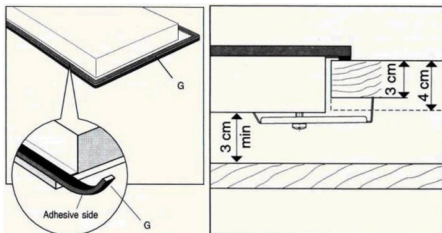

Fit Burners And Trivet.

- Replace burners and ensure they are correctly repositioned over the ignitor (S) and thermocouple (T). The ignitor (S) must be clean for trouble free sparking. Test burner ignition and burner flame for correct operation, if burner is placed correctly it will not rotate on its supports.


- The Triple Ring (Wok) burner (diagrams below) does not fit over the igniter or thermocouple but must be placed on its supports. Make sure trivet is fitted onto its locator on burners and cannot rotate after assembled.

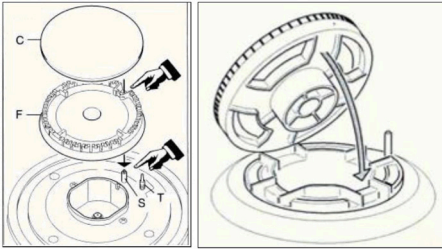


Electrical Connection

- Install a 10-amp general-purpose outlet (GPO) in accordance with relevant electrical standards and/or codes of practice applicable.
- The power supply cord (supplied) must not touch against any hot surfaces and must be placed so that its temperature does not exceed 75°C at any point along its length.
- After having installed the hotplate, the GPO must always be in an accessible position.


Wiring Diagram for MBCG633-4G/-F

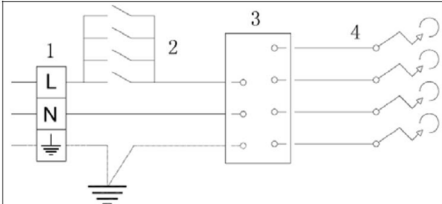

Wiring Diagram for MBCG332-2G/-F

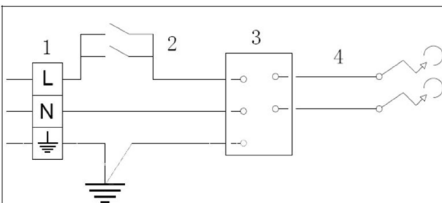

Wiring Diagram for MBCG331-1G/-F

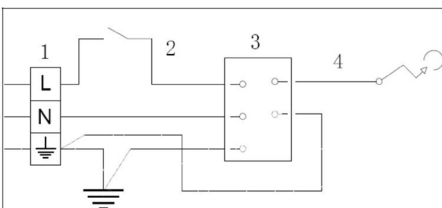

Gas Connection

Install in accordance with relevant gas standards and/or codes of practice applicable.

Connect the elbow fitting to the appliance gas manifold connection, and check that seals between the elbow and manifold connection are in place and in good condition.

- **For Natural gas:** Connect the natural gas appliance regulator (pictured opposite) with integral test point using approved gas thread tape or compound to the elbow fitting.




- **For Universal LPG:** see page 11.


Ensure the supply connection point, test point and natural gas regulator adjustment screw (for Natural gas installation) are accessible for testing and/or adjustment with the hotplate in the installed position. Where a flexible hose assembly is used, ensure it is approved to AS/NZS 1869, Class B.

Any hose assembly used must be restrained from accidental contact with the flue outlet of an under bench oven. This hose assembly shall be suitable for connection to a fixed consumer-piping outlet located as shown in the diagram.

Hotplates at a point 800 mm to 850 mm above the floor and in the region outside the width of the appliance to a distance of 250 mm.

After connecting to gas, check for leaks using soapy solution, never a naked flame.

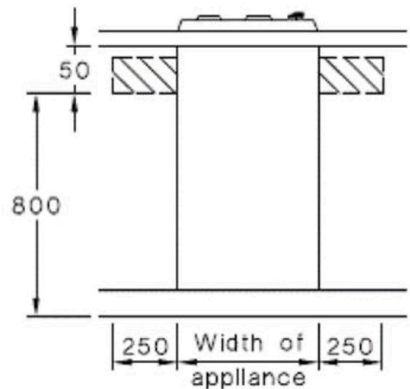

 Inlet connection region for flexible hose

Fit the duplicate data plate (supplied in separate bag) on a surface adjacent to the hotplate, for example, the inside of the cupboard door so it is clearly visible for any service technician.

Setting the Gas Pressure

Fit a manometer with a 6 mm rubber hose to the test point on the regulator (for natural gas).

For the Model MBCG633-4G/-F, light Triple Ring and Auxiliary burner on and adjust test point pressure to 1.00 kPa. Turn the two burners off and on again and recheck the pressure is same as set previously or adjust as required.

For all the other models, light all burners on and adjust test point pressure to 1.00 kPa. Turn burners off and on again and recheck the pressure is same as set previously or adjust as required.

Test for Correct Operation

After installation and adjusting burner pressure using test point, each burner ignition and operation must be tested individually and with all burners operating. This testing must be done by the installer before leaving.

Adjusting the Burner Minimum Flame Height

NOTE: This adjustment can only be performed by the installer or an authorised service personnel.

The minimum burner flame is factory adjusted for the gas type stated on the gas type label adjacent to the gas connection and should not require adjustment. Adjustment may be required if the hotplate has been converted from Natural gas to Universal LPG or vice versa.

Gas Conversion Instructions:

The manufacturers servicing instructions detail how authorised personnel may convert the hotplate from Natural gas to Universal LPG or from Universal LPG to Natural gas. Contact the manufacturer or agent as required.

Model MBCG633-4G/-F	Natural Gas			Universal LPG		
	Inj Diam	MJ/h	Test point kPa	Inj Diam	MJ/h	Test point kPa
Auxiliary	0.90	4.0	1.00	0.55	4.0	2.75
Semi Rapid x2	1.10	6.0	1.00	0.70	6.3	2.75
Wok	1.70	13.0	1.00	0.98	13.0	2.75
Total NHGC	29.0 MJ/h			29.6 MJ/h		


Model MBCG332-2G/-F	Natural Gas			Universal LPG		
	Inj Diam	MJ/h	Test point kPa	Inj Diam	MJ/h	Test point kPa
Semi Rapid	1.10	6.0	1.00	0.70	6.3	2.75
Rapid	1.40	10.0	1.00	0.90	10.0	2.75
Total NHGC	16.0 MJ/h			16.3 MJ/h		

Model MBCG331-1G/-F	Natural Gas			Universal LPG		
	Inj Diam	MJ/h	Test point kPa	Inj Diam	MJ/h	Test point kPa
Wok	1.70	13.0	1.00	0.98	13.0	2.75
Total NHGC	13.0 MJ/h			13.0 MJ/h		

Natural Gas

(the appliance test point is located at the regulator)

The supplied regulator must be fitted to the appliance inlet connection. Gas pressure must be adjusted to 1.0 kPa when approximately 50% of the burners are on high flame.

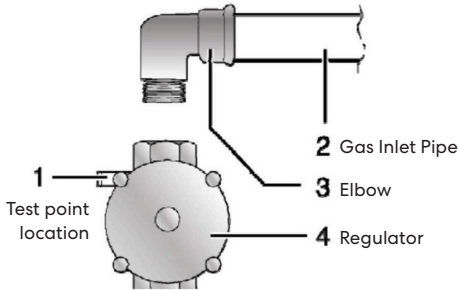


Universal LPG

(the appliance test point is located at the injector)

Gas pressure must be checked to confirm the appliance operating pressure is 2.75 kPa, the appliance test point is the rapid burner injector as shown below.

1. Disconnect power.
2. Light the auxiliary burner and set to high flame. Ensure all other burners are off.
3. Zero manometer, then apply flexible tubing to seal over the Rapid burner injector, hold securely in place and check the gas pressure by pressing in the corresponding burner control knob in, then turning to high flame position.
4. If the pressure is 2.75 kPa, reassemble the burner and perform the final checks as per this instruction manual.
5. If the pressure is **not** 2.75 kPa, disconnect the appliance and check/adjust/replace the LPG cylinder regulator(s) as appropriate in accordance with AS/NZS 5601.

Patent 2015101170. For enquires contact Gas Approval Consulting Pty Ltd
Timon licence 036 for SAI-400193

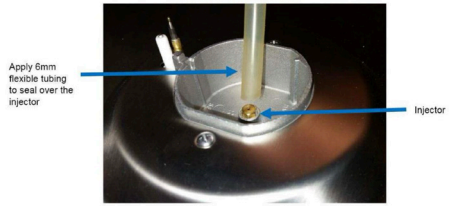

Patent 2015101170. For enquires contact Gas Approval Consulting Pty Ltd

Alternative: If the appliance is supplied with an LPG test point adapter; then this component maybe fitted to the inlet connection for the purpose of a test point

Adjusting the Burner Minimum Flame Height


NOTE: This adjustment can only be performed by the installer or an authorised service personnel.

The minimum burner flame is factory adjusted for the gas type stated on the gas type label adjacent to the gas connection and should not require adjustment. Adjustment may be required if the hotplate has been converted from Natural gas to Universal LPG or vice versa.

Gas Conversion Instructions:

The manufacturers servicing instructions detail how authorised personnel may convert the hotplate from Natural gas to Universal LPG or from Universal LPG to Natural gas. Contact the manufacturer or agent as required.

Using Your Appliance

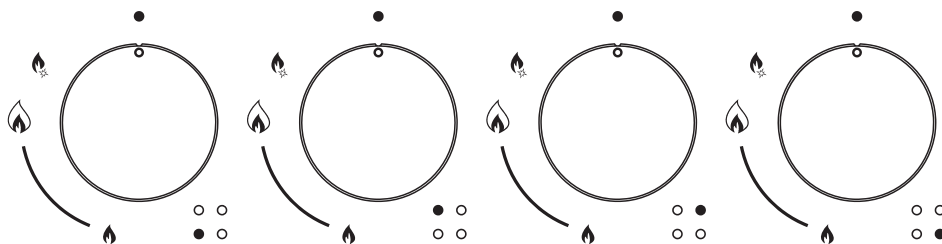

Icon	Description
	These show which zone is under control
	Ignition
	The highest flame power
	The lowest flame power

The hotplates are fitted with mains powered electronic spark ignitors, so must be connected to mains power supply (i.e. nominal 220–240 V ac) to operate. If power is not available, the hotplate will still work but the burners will have to be lit with a match or similar.

Depressing the gas control knob of any burner will activate the spark ignition for all burners. To light the burner, turn the gas control knob to the High Flame setting of the burner to be lit, while at the same time depressing the gas control knob to activate the spark ignition.

Once the burner is alight, continue to depress the gas control knob for 5 – 10 seconds to allow the flame safeguard to activate. If when you release the gas control knob, the burner flame goes out the flame safeguard has not heated up enough so repeat the ignition procedure after waiting 1 minute for gas to disperse. If problems with burner lighting persist, refer to the **Troubleshooting** section of these instructions.

If power is not available, light a match or similar, then turn the gas control knob for the burner to be lit, to the High Flame setting. Once again, if problems with burner lighting persist, refer to the **Troubleshooting** section of these instructions.

When burner lights, adjust desired flame height. On finishing, turn control knob to off position marked with a black dot.

Burner & Utensil Choice

Depending on the hotplate model, the burner choices are:

MBCG633-4G/-F: Auxiliary (small), Semi-Rapid x2 (medium), and Wok (triple ring) burners.

MBCG332-2G/-F: Semi-Rapid (medium), Rapid

MBCG331-1G/-F: Wok (triple ring)

The maximum utensil (pan) diameters in millimeters (mm) for each burner are:

For Natural Gas hotplates

- Auxiliary (small) = 195 mm
- Semi-Rapid (medium) = 195 mm
- Rapid (large) = 230 mm
- Triple ring (wok) = 270 mm

For Universal LPG hotplates

- Auxiliary (small) = 195 mm
- Semi-Rapid (medium) = 195 mm
- Rapid (large) = 195 mm
- Triple ring (wok) = 230 mm

The minimum utensil (pan) diameters in millimeters (mm) for each burner are:

- Auxiliary (small) = 80 mm
- Semi-Rapid (medium) = 140 mm
- Rapid (large) and Triple ring (wok) = 195 mm

For best efficiency and to ensure utensil handle does not overheat, place the utensil centrally on the burner and adjust the flame height so all the flame remains under the utensil.

Warning Symbols



Do not place anything, eg. flame tamer, asbestos mat, between pan and pan support as serious damage to the appliance may result.



Do not remove the pan support and enclose the burner with a wok stand as this will concentrate and deflect heat onto the hotplate.



Do not use large pots or heavy weights which can bend the pan support or deflect flame onto the hotplate.



Locate pan centrally over the burner so that it is stable and does not overhang the appliance.



Use only a wok support supplied or recommended by the manufacturer of the appliance.

Maintenance

To maintain safe operation, it is highly recommended that this appliance be inspected and serviced every two years by an authorised service person.

Cleaning and maintenance should be carried out with the appliance cold especially when cleaning the enameled parts. Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.

Stainless Steel

The stainless steel hob of the hotplate must be cleaned regularly (e.g. weekly) to ensure long life expectancy of the hotplate.

Ensure hotplate has cooled. Wash down with warm soapy water and rinse with clean water.

Dry with a clean soft cloth. A specialized stainless steel cleaning fluid may be used.

NOTE: Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.

Trivets (Utensil Supports)

Enameled parts must only be washed with a sponge and soapy water or with non-abrasive products. Rinse with clean water. Dry with a clean soft cloth.

Burners




Remove trivets from hob. Ensure burners are cool. Remove the burners enameled cap (C) and aluminum burner crown (F).

Wash down with warm soapy water and rinse with clean water. Dry with a clean soft cloth.

Use a cotton bud, toothbrush, or some other item to clean out any incrustations or dirt from the four holes marked (H)

Replace burners and ensure they are correctly repositioned over the igniter (S) and thermocouple (T). The igniter (S) must be clean for trouble free sparking. Test burner ignition and burner flame for correct operation.

The Triple Ring (Wok) burner (diagrams below) does not fit over the igniter or thermocouple but must be placed on its supports. If burner is placed correctly, it will not rotate on its supports.

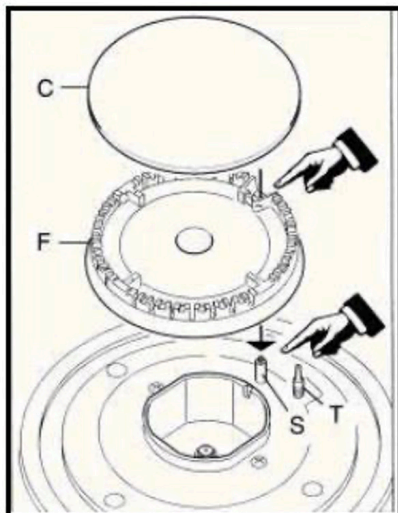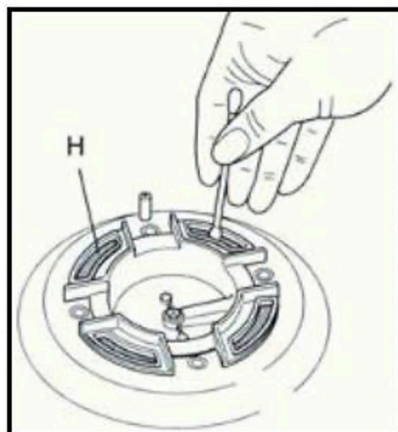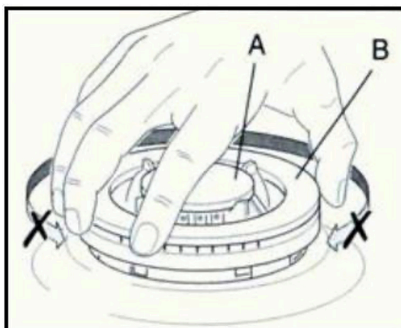

Troubleshooting

Servicing of the hotplates must only be done by an authorised service representative (see back of this booklet) and the hotplate must not be modified. Power must be disconnected before any servicing or maintenance is conducted.

It is recommended the hotplate serviced by an authorized person at least every 2 years. This service is not covered by warranty.

Abnormal conditions include:

- Excessively yellow or sooting flame type.
- Flame lifting off the burner ports.
- Flame lighting back into the burner (normally associated with a popping sound).
- Objectionable odour of the flames combustion products.

Should a faulty condition develop in the hotplate that is not described above, refer to the following table first for possible causes and remedies prior to contacting an authorised service representative. Servicing beyond the remedies listed shall only be undertaken by an authorised service representative.

Problem	Possible Causes	What to Do
No spark when gas control knob depressed.	No power	Check plugged in and switched on. Check mains circuit breaker.
	Loose sparkler cable	Call authorised representative.
	Burner not aligned properly	Remove and re-fit burner
Burner not lighting when spark ignition working.	Gas supply off	Check gas supply valve on.
	Burner not aligned properly	Remove and re-fit burner
	Burner ports blocked	Remove clean and replace burner
Burner goes out when control knob released.	Flame safeguard not activated	Re-light, allow more time for flame safeguard to activate
	Flame safeguard faulty connection or broken	Call authorised representative.
Uneven flame pattern or slight flame lifting.	Burner ports blocked	Remove clean and replace burner.
At minimum flame setting, the flame is too high.	Turndown control setting incorrect	Call authorised representative.
Small flame on High setting.	Regulator faulty	Call authorised representative.
	Gas supply pressure low	Call authorised representative.
	Incorrect injector fitted	Call authorised representative.
	Blocked injector or gas supply tube	Call authorised representative.
	Incorrect utensil size	Refer to operating instructions utensil choice
Flame too high on High setting.	Regulator faulty	Call authorised representative.
	Incorrect injector fitted	Call authorised representative.
	Incorrect utensil size	Refer to operating instructions utensil choice

Preventing Glass Cracks

Despite the sturdiness of the glass surface of the cooktop, it is important to understand that it could be vulnerable to the following specific factors that can result in cracks of the glass surface.

1. **Proper Installation:** Follow precise installation guideline as per this instruction manual. If the cut-out dimension and tolerance aren't met, then there is a risk of the glass fracturing due to expansion and contraction.
2. **Managing Thermal Stress:** Glass is very sensitive to temperature changes. Always let the cooktop to cool down completely before performing any cleaning. Avoid placing extremely hot pans directly on a cold surface of the cooktop. Gradually adjust heat settings to prevent extreme temperature fluctuations.
3. **Careful Cookware Handling:** To prevent impact damages, handle the cookware gently when placing them on the cooktop. Avoid dragging heavy pots across the surface, as this may cause glass scratches and weaken its integrity.
4. **Distributing Weight Evenly:** Distributing weight evenly across the cooktop. Avoid concentrating weight in specific areas of the cooktop especially near its edges or corners, which will cause stress and strain on the glass.
5. **Weight Limits:** Be cautious when using heavy or oversized cookware. Strictly follow the weight limit specified in this instruction manual.

Understanding these measures and implementing them proactively will ensure the prolong lifespan of your glass cooktop. By following these precautions and this user manual diligently, you'll ensure the enduring your cooktop for years to come.

Notes

Warranty

1.1 In this warranty:

- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
- 1.1.2 Company means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email admin@gsmretailgroup.com
- 1.1.3 Consumer means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Mistral product;
- 1.1.4 Consumer Guarantees means the guarantees under the Australian Consumer Law;
- 1.1.5 You means the Consumer.

1.2 Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.

1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Mistral product will be free of manufacturing defects and will perform to the Company's specifications.

1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Mistral product which is installed in a domestic household area.

*The In Home warranty does not apply to Commercial and or industrial usage.*Please See 1.7.7 for additional information

1.5 This warranty commences on the date of purchase of the Mistral product by the Consumer and continues for the benefit only of the Consumer until the expiry of three (3) year Warranty Period.

1.6 If within the Warranty Period a manufacturing defect is discovered in the Mistral product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Mistral product or supply a replacement Mistral product free of charge. A replacement Mistral product may differ from the original product purchased by the Consumer.

1.7 This warranty will not apply to any Mistral product:

- 1.7.1 Installed by any person other than a qualified tradesperson;or
- 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
- 1.7.3 Operated in any way contrary to any operating or maintenance instructions;or
- 1.7.4 Improperly handled, installed or maintained;or
- 1.7.5 Altered or modified prior to or after installation; or
- 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply
- 1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure.

FOR TECHNICAL ENQUIRIES CALL 1300 373 199 (AUSTRALIA) OR 0800 764 912 (NEW ZEALAND)

- 1.8 You must provide proof of your purchase of the Mistral product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Mistral product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Mistral product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Mistral product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Mistral product to the Company and for redelivery of the Mistral product by the Company (whether it is the original or a repaired and/or a replacement Mistral product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Mistral product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Mistral product in accordance with this warranty.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your purchase receipt/invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors there in. Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown

**FOR TECHNICAL ENQUIRIES CALL
1300 373 199 (AUSTRALIA)
0800 764 912 (NEW ZEALAND)
TO CONNECT YOU TO THE NEAREST AUTHORISED SERVICE CENTRE**



Gerard Sourcing & Manufacturing

GSM Retail Australia PTY LTD

GSM Retail Group has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Australia Pty Ltd. Group Companies



